

INTERNATIONAL NASCOM MICROCOMPUTER CLUB

It is with great pleasure, and relief, that I write this preface to the second newsletter. I have always wanted the INMC to be run by hobbyists and certainly not by Nascom. My staff will, of course, continue to do the donkey work in answering your queries and collating and printing the newsletter.

As you will see as you get further into this newsletter, I have persuaded various London-based hobbyists to become an INMC Committee. We have been very fortunate in persuading David Hunt to chair this committee. They layout their ideas later on. However, I would immediately say that they have a totally free hand in the running of INMC, they are entitled to publish in the INMC News any relevant Nascom information, be it complimentary or otherwise, that they feel is worthwhile with the exception of any detrimental comments against a Nascom competitor.

I hope that you will really start to support them fully now and that the INMC can become the force that it should be within hobbyist and other computing and that its value to the Nascom user in particular will be significant.

I wish you all every success and hope that the Club library will now show an enormous upturn for the better.

KAnland

Chairman's Letter.

A few weeks ago Kerr Borland of Nascom approached us and asked if we would be interested in forming a committee to run the INMC; so after a most undemocratic election (each proposing the other and voting despite the protests of the nominee), we reluctantly agreed to become the committee until such time as a more democratic method could be adopted. In return for Kerr's generosity in suggesting we become the committee, we landed him with the job as President.

So, having taken the job let us introduce ourselves:

Kerr Borland Nascom Sales Director President Dave Hunt A Nascom Distributor Chairman Richard Beal Systems analyst/consultant Softwareco-ordinator Howard Birkett Film Editor Hardware co-ordinator Paul Greenhalgh Nascom Engineering General dogsbody

So our first job was to define the aims of the INMC, which we set out as follows:

- 1. That the INMC should be self-supporting; which would allow the INMC to be reasonably independent of the manufacturer.
- 2. To distribute hardware and software information about Nascom as cheaply as possible, consistent with making the INMC self-supporting.
- 3. To do this by means of a software library and newsletter.
- 4. That the library and mailing address for the INMC should remain as Nascom Microcomputors at Berkhamsted, and that Nascom would publish and distribute the newsletter.

We would like the newsletter to contain news and information that members might consider of interest to other members, as well as software and hardware notes. We would also like to set up a 'Problems Page' to answer specific questions that might be of interest to other members. So send in your articles, problems, moans, praise etc, Nascom will forward them to the appropriate members of the committee for editing and inclusion in the newsletter.

Remember, the more feedback we get from members, the more lively (and more frequent) the newsletter will become. So to sum up, this is your newsletter, USE IT!!!

All INMC correspondence should be addressed to:

The Editor
INMC Newsletter
c/o Nascom Microcomputors Ltd
121 High Street
Berkhamsted
Herts HP4 2DJ

Yours sincerely

Dave Hunt

NASCOM I - Various Technical Notes

1). Floating Inputs to PORT 0. Keyboard user in puts.

Although the software ignores spurious characters which may appear on PORT O, the keyboard routine still carries out a search to determine whether the input was valid. If, as is likely, the two user inputs on SKT 1 are left unconnected, this could have a detrimental effect on the running of any program with interactive keyboard routines.

For example, as B-BASIC V1.1 scans the keyboard for change at the end of each statement, any spurious input to PORT O, will cause the keyboard routine to 'waste time' searching for a character which does not appear in the keyboard lookup table. This has the undesirable effect of making a 'FOR - NEXT' timing loop vary with each spurious character detected, causing imprecise timings.

This flaw may be easily rectified by connecting the two user inputs to +5 volts, forcing them permanently 'high'. Under these circumstances, no spurious inputs occur.

2). UART clocks.

The effective speed of Load and Dump (and Read and Write) may be doubled by connecting the UART clock link to pin 12 of IC2 (it is normally connected to pin 11 of IC2, via the UART clock link). This modification has been found to work on the majority of Nascoms; further, on some Nascoms it has been found that the speed may be doubled yet again by connecting the link to pin 13 of IC2. It should be noted that these modifications are not 'quaranteed' to work.

Adjustment of the 1760Hz (10 chars./sec.) UART clock, without test equipment. Firstly, it should be noted that this clock need not be adjusted until such time as a printer or other

serial peripheral is added. Adjustment is affected by VRI. Clockwise rotation reduces the clock speed. With a printer attached via the RS232 or 20mA outputs, a short test program may be written that will output continual text in the form '1234567890123....' etc. Adjustment is made by observing the printed output;

If the clock is too fast, random garbage will appear, thus:

123c5u789,P234+z7 etc.

If the clock is too slow, characters will be missed, thus:

1235679013457891 etc.

Note that VRl is a multuturn (20 turns) preset, and that the end stops are detected by an increase in rotational torque at the ends of the track. No harm can be done by over 'turning' the preset.

Correct adjustment is the mid point between garbage and missing characters, this is a latitude of 4 to 5 turns of the pot.


The clock speed may be changed to 4800Hz (30 chars./sec.) by changing Cl2 to a 8n2 10% polyester capacitor. Setting of the 4800Hz clock is as above.

3). "Snow Plough" and NMI "Break".

The snow plough is used in conjunction with ICll to increase the VDUSEL blanking time to eliminate 'snow' on the screen during memory access to the video RAM. See Fig. 1. The simplest method of construction is to take one of the spare 16 pin dil plugs (supplied) and cut off two pins, making it a 14 pin plug. Then cut a piece 0.1" pitch vero board about 1" wide by about 1.5" long, with the tracks in the longer direction. Mount a 14 pin socket at one end (breaking tracks as appropriate) and build the LS123 circuit at the other, connecting the output of the 123 to pin 5 of the 14 pin socket. Then solder the 14 pin plug pin for pin to the underside of the 14 pin socket (except pin 5). Link pin 5 of the plug to the input of the 123 circuit, and low!! a little plug in module which carries ICll and the 123, with a plug that fits directly into ICll socket on the board. Neat, tidy and effective. Don't forget to connect power to the 123, in parallel with pins 7 and 14 of ICll.

Plug in the module, and a TV display should appear as usual. Tab from O to FFFF and adjust the preset pot such that the 'snow' just disappears.

The NMI 'Break' can only be used with NASBUG T4 and B-BUG. This should be made on a small piece of veroboard and mounted somewhere appropriate. To connect it, a wire should be run from pin 8 of IC42 (under the board) to the input of the circuit. The CPU should be lifted from the board and pin 17 carefully bent out horizontal, the CPU may then be replaced. The output of the circuit is connected to pin 17 of the CPU, using a 'Soldercon' pin. DO NOT SOLDER TO THE CPU.

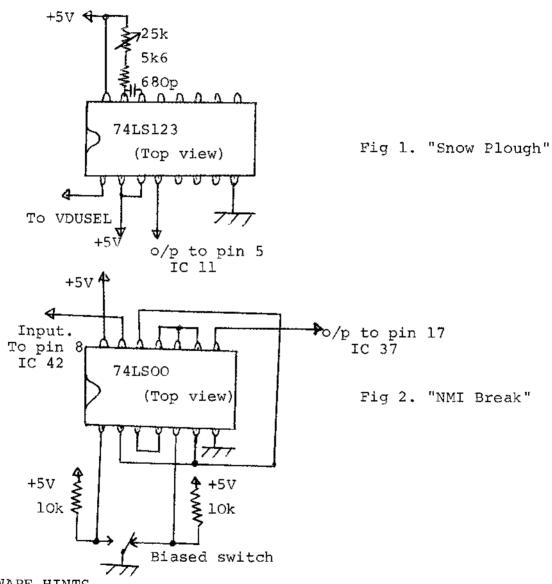

SOFTWARE HINTS

Suppose you want to compare HL with DE, without changing the contents of either register. Try this:

| В 7 | OR | Α | |
|------------|-----|-----|----|
| ED 52 | SBC | HL, | DΕ |
| 19 | ADD | HL, | DE |

If HL = DE, the Z flag is set, otherwise it is reset. If HL is greater than or equal to DE, the carry flag is

If HL is less than DE, the carry flag is set.

And it only takes four bytes!

AF

Not everyone has realised that the Nascom monitor program 2. uses the Z80 restart instructions to provide some useful features. Print String is an easy way of putting out messages.

ΕF RST 28H 48 45 4C 4C 4F /HELLO/ DEFM00 DEFB

These seven bytes will make the message 'HELLO' be displayed. Don't forget to put the value 00 at the end of the message, or the screen will fill up with the contents of the rest of your program!

- 3. Have you wondered about the meaning of the characters which hex values 00 to IF give you on the screen? Each one is, in fact, a picture which represents the equivalent ASCII code. For example, A is a bell!
- The breakpoint command uses a restart to stop the program 4. and display the registers. If you want, you can put the same code, E7 in hex, in several places in your program. You may find it a good idea to fill any empty space with this code, because if you jump to it by mistake, the program will stop, and the register display may give you some clues.
- 5. In case all this has been too easy, here is a puzzle for you.

XOR A

: Set A to O 06 00 LD B,O Set B to O 3C INC A LABl Increment A 27 DAA Decimal adjust 10 FC DJNZ LAB1 Repeat, 256 times. E7 RST BRKPT Display registers.

Now A has been incremented 256 times, and the DAA instruction makes this work in decimal, so A should be 56 at the end. Why isn't it, and how would you correct the program? (No, the Z80 doesn't have a fault in it!)

The original Nascom Software notes suggested jumping to an 6.

address in the monitor to end a program. This will cause problems. It is always safe to jump to address 0, which restarts the monitor program correctly.

If you don't want to clear the screen

Reset the stack to OC33H then jump to PARSE

Notes on PIO Operation.

The Nascom I has on board two totally uncommitted 8 bit parallel I/O ports complete with handshake lines, in the shape of an MK3881 Z8O - PlO. The PlO is, in itself, a fairly complicated processor, which needs programming before it will operate in any of its 4 modes:

OUTPUT MODE O

INPUT MODE 1 (automatically set on PIO Reset)

BIDIRECTIONAL MODE 2 CONTROL MODE 3

It is not the purpose of these notes to describe in detail these operational modes, but to help clear up a few common problems encountered in controlling the PIO.

One very important fact to note is that the PIO is not reset by the RESET button on the keyboard. This resets the CPU only, NOT the PIO. It may be reset in two ways. The simplest is to switch the power off and on again; a bit drastic but the PIO does have automatic power on reset. The second method (shown in fig.3) is to apply an MI without either \overline{RD} or \overline{IORQ} . It should, however, be pointed out that, since the CPU can be reset, it is always possible to regain control of the PIO in software, by simply reprogramming it.

Now to 'interrupts'. Don't forget that the PIO is designed to operate in the Z-80 Interrupt Mode 2, so before doing anything put the CPU into this mode by executing 'IM 2' (HEX code ED 5E). Remember that a CPU reset puts the Z-80 back to Interrupt Mode O clears the I register, and dissables CPU interrupts (having no effect on the PIO).

In Interrupt mode 2, the CPU finds the address of the interrupt routine, by loading the Program Counter (P.C.) with the contents of the memory address. This is formed by the I register (high byte), and the interrupt vector sent from the interrupting port (low byte).

For example, let us suppose that an interrupt routine for Port A starts at OE12H, and that the interrupt address table will be stored at OF8OH. In order that the routine should be found correctly, the I register should contain OFH, the value 8OH should be sent to the control register of Port A, and finally, memory locations OF8OH and OF81H should contain 12H and OEH respectively (low byte first). At an interrupt, CPU interrupts are automatically disabled and must be re-enabled, if required, by the programmer.

Always end an interrupt service routine with the RETI instruction, as this is the only way to indicate to the PIO port, that the service routine is finished. This feature can cause some dismay to the unwary. Take the following example: everything is set up correctly, and the PORT interrupts correctly. However, unfortunately the interrupt routine crashes. No problem to our intrepid experimenter, he presses reset, debugs the interrupt routine and tries again, remembering to reset IM 2, I register and interrupt enable. Dismay! Nothing happens. No interrupt.

The problem is that the PIO still thinks that is is being serviced for its initial interrupt, and is internally inhibited from causing another. A useful routine to get out of this sort of problem is as follows:-

| 21 | 00 00 | LD | HL, | 0000Н |
|----|-------|------|-----|-------|
| E5 | | PUSH | HL | |
| ED | 5E | RETT | | |

This will tell the PORT that its service routine is finished and then restart the monitor by executing from OOOOH. It can be used at any time, if there is any doubt as to the status of a PIO.

Once the mode and interrupt control have been set, the Port interrupt may be enabled or disabled by sending 83H or O3H to the control register. This feature could form the basis of a generalized interrupt control program for a given system. However, it should be noted, that the correct way to disable a port interrupt, is to first of all disable CPU interrupts before the Port interrupt. This is because an interrupt by that Port, during the execution of the instruction to disable its interrupt, would cause a system crash.

Finally, when a Port has been disabled, an interrupt may be pending, so that when the Port is again enabled it will at once interrupt the CPU. This Pending interrupt may be cleared, if required, by sending an interrupt control word with bit 4 set. This is effective in all modes.

Please let us know of any interesting applications for your PlO, or better still write an article for YOUR newsletter.

Two programs by Dave Hunt will be available from the Software library for those interested in checking out the ports.

These are

PlO Latch Test

&

PlO Vectored Interrupt Test

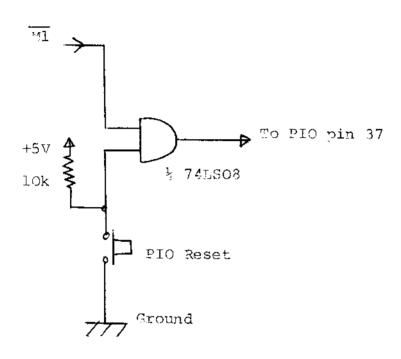


Figure 3.
Reset circuit for PIO.
(Switch is Push to Make.)

Nascom Users Group

We hear that Merseyside Nascom owners have formed a users group which meets on the first Wednesday of every month in Liverpool. All enquiries should be made by contacting Graham Myers on 051-677-9340 (after 7.00 p.m.)

QUERIES AND FAULTS.

The Nascom distribution network has been set up in order to give the customer a more personal and efficient back up service. If you have any queries on any aspect of your Nascom you should contact your distributor who will be

willing to assist you with the problem.

If you have a hardware fault many of the distributors are able to offer a repair service. If your distributor does not offer a repair service, then the unit can be returned direct to Nascom's service department.

Finally, if you feel that you are not getting anywhere with either your distributor or Nascom, then write to the Editor, INMC, and we will see what we can do.

APPLICATIONS

We would be interested to hear from anybody who is using, or would like to use, their Nascom l for any specialised purpose.

Amateur Radio - We hear that John Wilson, G8HUN, is compiling details of amateur radio applications and he would like to talk to anyone interested in this field. So far he knows of people who are investigating using their Nascom for RTTY, transmitting and receiving morse, satellite tracking, controlling synthesizers etc. Anyone else interested in these or similar applications should contact John, in the first instance c/o INMC.

Whilst on this subject, it should be noted that the 2K monitor, Nasbug T4, contains amongst its routines one that enables radio amateurs to transmit and receive ASCII data with no additional software and minimal hardware modification.

MICROCOMPUTER BOOKS

Mine-of-Information of St.Albans stock a range of microcomputer books and will offer members of the INMC a discount of 10%. Enquiries should be made to:

Mine of Information Ltd 1 Francis Avenue St.Albans AL3 6BL

/

٠, -

MYSTERY PROGRAM

This program has been written by an anonymous INMC member - would you please identify yourself! As we don't know who the programmer is, we won't tell you what the program does - try it! All we will say is that the space bar runs the program, it executes at OC60 and you really need the "snow-plough".

P.S. Apologies to the writer for the mods. we've made.

```
0C60 3E AA 32 51 0E 21 00 00
                                  OEOO OO CD EE OE OO CD 50 OD
0068
     22 D8 OD 01
                  05
                     OD 21
                            AA
                                  0E08 CD B0 0D C1
                                                     OD D9 C0 D9
0C70 OB 11 19 60 D9 CD D6
                                  0E10 0E
                                          05 05
                            00
                                                 CD 85 0D CD 80
0078 00 00 CB CO
                  ŪΒ
                     11
                         7A
                            08
                                  0E18 0E C1 FE AA 28 10
                                                           00 SE
0080 CD 00 0D
              11 FA
                     09 CD 00
                                  0E20 19 BB 11 27
                                                    19 28
                                                           03 11
0088 OD CD 50
              01
                  CD 28
                                  0E28 19
                                          60 00
                                                 00 05 28
                        OD CD
                                                           05 D9
0090 1A OD CD 37
                  0D 00
                         ÛÛ
                                  0E30 C9
                                           00 00
                           0.0
                                                 00 11
                                                       19
                                                           19 CD
0098 OD D8
                                                 19 19 21
            0D
               ЗА
                  51
                     DE FE
                           96
                                  0E38 90 0D 11
                                                           0.0
00A0 00
        58 0E
              0.0
                  90 00 90
                            00
                                  0E40 22 D8
                                                           51
                                             -0D 06 OD 2A
00A8 00 00 00
               0.0
                  00 CD 70
                            0D
                                  0E48 2B 2B 2B 2B 22 51
00B0 FE 11 28
                                  0E50 C9 AA 0B
               06 FE
                     03 28
                            07
                                                 00 00 00
                                                           0.0
0CB8 18 19 11
               7A
                                  0E58 3E AA 32
                  08
                                                 51
                     18
                                                     0E 21
                                                           70
                        0:3:
                            11
                                                               0F
0000 FA 09 CD
               0.0
                                  0E60 CD DC
                                              00
                  ŪΦ
                     ЗE
                        20
                            32
                                                 OD 69 00
                                                           30
                                                              FE
0008 89 0A
           3E
               20
                  32 FA
                        08
                           -0.0
                                  0E68 CD CO 0D 21
                                                     0A 08 11
                                                              ĐΒ
0CD0 CD 50
           010
              03
                  80 00
                                  0E70 08 01 80
                        EF 1E
                                                 00 ED B0 CD D9
00D8 00 21 60 OF
                                  0E78 00 D9 21
                  11 D5
                        0B 01
                                                 AA 0B D9 69
0CE0 19 00 ED BO C9 AA
                                  0E80 00 00 00 E5 3E 20 23 BE
                        80 00
0CE8 00 00 00 00 00 00
                        00 00
                                  0E88 20 1A 2B
                                                 2B 2B BE
                                                           20
                                                              14
0CF0 00 00 00 00 00
                                  0E90 CD A5 0D
                     0.0
                        ŨÛ
                           0.0
                                                 ΒE
                                                     20
                                                       ÛΕ
                                                           23
                                                              ΒĒ
0CF8 00 00 00 00 00 00
                                  0E98 20 0A 23
                         0.0
                           0.0
                                                 BE 20 06
                                                           23
                                                              BE
0D00 00 00 00 21
                                  0EA0 20 02 E1
                                                 C9 00 E1
                  00 OF
                         ÛΕ
                            05
                                                           ÛŪ
0D08 C5 01 10
                                  0EA8 00 CD 37
              00 ED BO
                            21
                                                 OD CD 50
                                                           0D
OD10 30 00 19 EB
                  E1 01
                         0D
                            20
                                  0EB0 FA 09 CD
                                                 0.0
                                                     OD 11
                                                           80
OD18 EF C9 21 C9
                                  0EB8 21 50 0F
                                                 01
                                                     09 00 ED
                  09 11
                        08
                            09
                                                              B0
                                  0EC0 11 40 0A 21
0D20 01 42
                                                     20 OF
           01
               ED BO
                     09
                         00
                            0.0
                                                           01
                                                               ÐΘ
                                  0EC8 00 ED B0
                                                 21 20 OF
                                                           11
                                                              FE
0D28 21 B8 09
              11
                  B9 09
                        0.1
                           40
                                  0ED0 09 01
                                              OC:
                                                 00 ED B0 CD
                                                              50
0D30 01 ED B8
              09
                  00 00
                        00 21
                                  OED8 OD 3E AA 09 00 00
                                                           0.0
0D38 7A 08
           0.1
              05
                  00 3E
                        20
                           77
0D40 11 40 00 19
                  OD 20 F6
                            ЗE
                                  0EE0 00 00 00
                                                 00
                                                     00 00
                                  0EE8 00 80 00
                                                 0.0
                                                     00 00
                  09
                                                           38
0D48 0B BC
           08
              21
                     09
                        18
                            ΕĤ
                                  0EF0 0B FE 20 C8 CD B0
                                                              09
                                                           ŰĎ
0D50 0E
        03
           co
               35
                  00 OD
                        20
                            FA
0D58 C9
        00 00
              0.0
                  0E 13 C5
                           ^{\circ}
                                  0EF8 00
                                          ΩĐ
                                              0.0
                                                 00 00
                                                       20
                                                              FF
                                  0F08 20 20 20
                                                 20 20 5F
                                                           5F
0D60 28 0D CD
                  OD OD D8
              1Ĥ
                           0D
                                  0F08 5F 5F 5F
0D68 CD 37
                                                 50 50 50 50
           QΦ
              01
                  0D 20 EF
                            09
0D70 00 3E
                                  0F10 20 20 20 20 AF 20
           20
              21 87 OD C5
                            47
                                  0F18 29 20 20
0D78 ED 5F
               38 01
                     3D 77
                                                 50
                                                    20 29
                                                           20
                                                              20
           86
                            90
0D80 30 FD 80
                                  OF20 FF FF FF FF FF
               30
                            67
                                                           FF FF
                 \Box 1
                     00 09
                                  0F28 FF FF
                                              FF
                                                 FF FF FF
                                                           FF
                                                              FF
0D88 00 00 00
              0.0
                  0.0
                     90 00 90
                                  0F30 FF
                                          FF
                                              FF
                                                 FF
                                                    FF
                                                        FF
                                                           FF
                                                              FF
0D90 E5 D5 C5
              7B
                  77
                     28
                           77
                        7A
                                  0F38 FF FF FF
                                                 FF
                                                     FF
                                                        FF
                                                           FF
                                                              FF
0D98 CD A5 0D
              ЗE
                 28
                     77
                        23
                            30
                                                 50
                                  0F40 20 20 20
                                                     5F
ODAO 77 C1 D1
              E1 09
                     0E 40 2B
                                                       2F
                                                           20
                                  0F48 20 20 50
                                                 5F
                                                     2F
                                                       20 20
0DA8 0D 20 FC
               09
                                                              20
                  00 00
                        00 00
                                                 55
                                                           4E 43
                                  0F50 41 4D 42
                                                    40
0DB0 E5
        3E
           20
               77
                  28
                     77
                        CD A5
                                                       41
           23
               77
                  E1 09
                                  0F58 45
                                           00 00
                                                 0.0
                                                     0.0
                                                       0.0
                                                           00 00
ODBS OD 77
                        ÛÜ
                            ÛÜ
                                  0F60 2A
              0E 05 11
                                          20 40
                                                 4F
                                                     40
                                                       40
                                                           59
                                                              50
ODCO 21 AA OB
                        19
                            19
                                  0F68 4F
                                          50 20
                                                 40
                                                     41
                                                       44
                                                           59
0DC8 E5 CD 90
              OD E1 2B 2B
                                                              20
                            2B
                                  0F70 54 52 41
                                                 49
                                                       45
                                                           52
ODDO 2B OD 20
              F1 09 00
                                                     4E
                                                              -20
                        ÛŨ
                            ŪÜ
                                  0F78 2<del>A</del> 20
                                             20
                                                 20
                                                    50 72
                                                           65
00 00 8dd0
              00
                  0.0
                            0.0
                        0.0
                                  0F80 73
                                          20 73
                                                 70 61
                                                       63
                                                           65
                                                              20
ODE
     00 00
           00
               0.0
                  0.0
                     0.0
                        0.0
                            00
                                  0F88 49 4E 4D
                                                        52
                                                           55
                                                 43
                                                     20
                                                              40
ODES.
     00 CD 69
               00 FE
                     20 28
                            04
ODFO CD 50 OD C9 21 18 20 22
                                  0F90 45 53 20 4F
                                                    4B 00 00 00
ODF8 D8 OD D9 CD 90 OD C5 OO
```

NASBUG T4 Extended 2K Monitor for Nascom I

NASBUG T4 incorporates the best facilities of NASBUG T2 and B-BUG, and has been further extended to allow keyboard access to the PORTS, use as an intelligent terminal, keyboard shift options, and the Z80 restarts to be of more use to the user.

Command Table

- Hexadecimal arithmetic to calculate the sum, difference and Α relative jump of two addresses.
- Breakpoint as NASBUG T2, but also automatically relocates the В cursor to the bottom left of the screen if it has been moved by the user. Breakpoint is set to zero on Reset.
- Copy as in NASBUG T2.
- Dump as in NASBUG T2, but with extra features for error erradication.
- Execute as in NASBUG T2. Ε
- Generate. On reading a tape recorded in this format, the tape G enters its own Read and Execute commands and automatically executes itself.
- Intelligent Copy will copy data up or down without corruption Т which can occur under certain conditions using the C command. C command has been left in the command table as the corruption caused can be deliberately used to profit under certain conditions.
- Nascom keyboard as normal but shift now gives lower case K letters. KO is automatically set on RESET.
 - Letters shift is inverted from KO (typewriter mode). Κl
 - As KO, but holding down the space bar causes the ASCII representation of the character typed to be displayed.
 - As Kl but in ASCII mode as K2.
- Load as NASBUG T2.
- Memory examine/modify as NASBUG T2, but is additionally capable Μ of backwards stepping through memory, and immediate jumps to different locations in memory.
- M Reverts 'X' to normal.
- 0 Output to a port.
- 0 Input from a port.
- Read as in B-BUG. Four times faster than 'L'. R
- Single-step as NASBUG T2, but relocates cursor as in 'B' (above). S
- Tabulate as in NASBUG T2.

NASBUG T4 (Continued)

- W Write as in B-BUG. Four times faster than 'D'.
- Multiple option external mode, which converts Nascom to a full ASCII intelligent terminal. Capable of supporting paper tape with odd or even parity, with or without automatic CR/LF, Teletype as above in half or full duplex, external mainframe timesharing systems through a telephone modem in full or half duplex, odd or even parity, with or without automatic CR/LF, and of course multiple Nascom configurations. This command is possibly the most powerful of all.
- Z Directs the Nascom to accept a new command table at the argument supplied by 'Z'.
- ? Prints out the current command table in the following format:

ABCDEGIKLMNOQRSTWXZ?

Restart vectors (Z80 page 0)

- RST O (C7) Restart NASBUG T4
- RST 8 (CF) 'Soft restart' NASBUG T4. As RST 0 but does not clear screen.
- RST 16 (D7 xx) Allows relative subroutine calls to be made using displacement (xx). Note that this feature is supported by NASBUG T4 and not by the Z8O, and therefore cannot be used in Z8O based systems not using NASBUG T4.
- RST 24 (DF xx) Allows a direct call to location OEOO plus a displacement (xx), the displacements are in 3's, allowing the user to locate tables, reflective jumps etc. in this area. Note; not supported by Z8O as RST 16.
- RST 32 (E7) Breakpoint as in NASBUG T2.
- RST 40 (EF) String print as in NASBUG T2.
- RST 48 (F7) Direct call to \$-CRT
- RST 56 (FF) Calls part of KDEL as in NASBUG T2, allowing KDEL to be shortened proportional to the value in A, allows for accurate timing in increments of approx. 50 uS.

SOFTWARE LIBRARY

The original intention of the INMC software library was to gather together user programs and offer them to members for a minimal photocopying charge - they would be unchecked and untested by the INMC as the originator would presumably have debugged them. However, from the programs that the INMC have so far received we can see that this system will not work - unless you want 8 different versions of Mastermind and 5 Hangmans! We are,

therefore, sorting through the programs at the moment and putting them into various categories - e.g. runs on unexpanded Nascom, runs on expanded Nascom, runs under Tiny Basic, Super Tiny Basic etc. We hope to have a list available shortly but meanwhile you'll find a machine code program and some Super Tiny Basic examples elsewhere in this newsletter.

However, it is obvious to the committee that everybody lost interest during 1978. This, of course, includes us. We have taken on the task of trying to re-establish the INMC on the assumption that most users, like ourselves, would rather have it working than not have it at all. Therefore, we need your help, your support, your programs and your ideas and hardware additions that we can publish in our newsletter. Now that many people have expanded Nascoms we hope that we will start to see significant numbers of programs of a more interesting nature than perhaps was possible before when one had to create the whole thing in machine code.

This first three months is critical not only from the point of view of you starting to believe in us, but also to confirm in our minds that the INMC is practical. The whole thing is now in our control and having objected strongly to the way that Nascom ran it last year, we rely on your support so that we can run it properly.

COMPETITION.

We have decided to hold a competition to see what sort of nutty games programs you are all writing. The rules are outlined below. First prize will be either a Super Tiny Basic or a Zeap editor/assembler cassette along with a selection of the programs submitted. There will also be five runners-up prizes, each being a selection of the programs submitted to the competition. So send in your programs - don't worry what your coding is like, we won't be judging that!

Rules

- 1. All entries must be received by 27th May 1979
- 2. Winners will be notified by post and will be listed in a future newsletter.
- 3. Programs must run in an unexpanded Nascom and must be Nasbug T1/T2 compatible.
- 4. Programs will be primarily judged on "entertainment value".
- 5. Additional consideration will be given to original and to neatly written and well commented programs.

- 6. All entries must be made on paper no cassettes or alternative formats will be judged.
- 7. All entries become the property of the INMC and may be added to the software library.
- 8. The judges will consist of the members of the INMC along with their families and any passers by.
- 9. The final (after the fighting has finished!) decision of the judges is absolute and no correspondence on it will be answered!
- 10. Any number of programs may be submitted by an entrant.
- 11. Programs that have already been submitted to the INMC may be entered but this must be done by sending in a new copy.
- 12. No correspondence for the INMC or any part of the Nascom organisation should be included with the entry.
- 13. Alongside the Name and Address of the Entrant the preference for Zeap or Super Tiny Basic should be indicated.
- 14. All entries should be addressed to:

INMC Games Competition c/o Nascom Microcomputers 121 High Street Berkhamsted Herts HP4 2DJ

ZEAP

Quite a few people have written to Nascom detailing "errors" that they have found in Zeap. In actual fact we know of very few incidences of faulty tapes being supplied or of any major operational bugs - errors have usually been found to be caused by incorrect entry of source programs, or by faulty memory boards. Please read the Zeap manual carefully to ensure that you are operating Zeap correctly. If you are in any doubt as to if your memory board is functioning correctly, then contact either your distributor or Nascom.

All of the members of the INMC committee have been running Zeap for some time now, and many programs have been written using it this includes the 2K monitor, Nasbug T4. We are, therefore, in no doubt that the Zeap package is an extremely powerful and worthwhile Nascom product.

Situations Vacant - Software

Nascom Microcomputers are looking for a programmer to work on disc operating systems and languages. If you would like to be considered please send a brief career resume to Tony Rundle, Software Director, 121, High Street, Berkhamsted, Herts.

Another Nascom Users Group

Frank M. Butler would like to hear from other local NASCOM users with a view to starting a club in North Wales. Enquiries to:

Frank M Butler, 8A, Church Side, Mansfield, Notts. NG18 1AD

Telephone: Mansfield (0623) 29237

Double Mastermind

A code guessing game for the Nascom 1. By D. Ritchie.

This programme was included in the first batch of programmes issued by the INMC. Unfortunately, it did not copy very well, and a number of customers were unable to read the object code listing. We are, therefore, including a copy of the object listing in the newsletter. The source listing will continue to be available from the INMC library in the normal way.

Notes on the game

Codes are made up of any combination of four of the octal digits (O - 7).

The score for each guess is given as 2 digits. The first is the number of correct digits in correct position. The second is the number of correct digits in the wrong position.

You and the machine take alternate guesses at each others code. You first enter a guess at the machines code, 'newline' gives your score. Another 'newline' gives the machines guess at your code. After entering its score, 'newline' lets you enter your next guess, and so on until both codes are found. Pressing R will re-start the game at any time. Backspace can be used to correct entries.

Notes on Programme

Start address is OD22 OF65 to OFAO approx. are used for storage.

Double Mastermind by D. Ritchie

Executes from OD22

```
M 0050,0F5B
0050 11 6B OF 21
                  69 OF AF 08
                                06 04 1A BE
                                              CC 7F 0C 13
0060 23 10 F7 08
                  09 21 69 OF
                                AF 08 0E 04
                                              06 04 11 60
0070 OF TABLE CO
                  7F 0C 13 10
                                F8 23 0D 20
                                              EF 08 C9 B7
0080 F8 2F 12 7E
                  2F 77 08 3C
                                08 C9 21 68
                                              OF 06 04 23
0090 7E B7 F2 96
                  00 2F 77 10
                                F6 C9 21 69
                                              OF OE 04 ED
OCAO 5F 07 07 07
                  07 E6 07 77
                                23 08 2F 47
                                              10 FE 0D 20
OCBO EE 09 01 04
                  00 21 65 OF
                                11 69 OF
                                         30
                                              O1 EB ED BO
0000 C9 21 1B 0F
                  7E 23 FE 04
                                28 05 CD 3B
                                              01 18 F5 11
OCDO D9 OR O1 OD
                  00 ED B0 3E
                                20 32 8A 0B
                                              C9 78 B9 F0
                                20 BB 2B BB
OCEO 04 BB 36 00
                  20 DD 36 FB
                                              2B C9 D9 19
OCFO ES DD E1 D9
                  09 OF 3E 00
                                FE 52 CA 22
                                              OB C9 CD F5
ODOO OC FE 1D C8
                  FE 30 38 F6
                                BB 30 F3 C9
                                             FD 34 01 FD
0010 7E 01 FE 0A
                  38 06 DR 36
                                F2 31 B6 QA
                                             C6 30 DD 27
OD20 F3 C9 31 00
                  10 21 2D 08
                                11 20 00 D9
                                              FD 21 E0 0F
0030 AF FD 77 FF
                  FB 36 00 75
                                FD 77 01 CD
                                             C1 OC CD 9A
OD40 OC 37 CD B2
                  OC CD EE OC
                                FD CB FF 46
                                              C2 C7 OD AF
0050 CD B2 OC OE
                  04 41 2E 38
                                ed do oc db
                                              36 00 5F CD
0060 FE OC FE 10
                  28 F2 DD 77
                                00 DB 23 DB
                                              23 10 EC CD
OD70 F5 OC FE 1D
                  28 E2 FE 1F
                                20 F5 21 70
                                              OF DD 28 DD
OD80 2B DD 7E 00
                  D6 30 38 04
                                77 28 18 F1
                                              CD 50 OC F5
OD90 C6 30 DD 27
                  00 CD 65 OC
                                C6 30 DD 77
                                              0E F1 FE 04
ODAO 20 25 FD CB
                  FF C6 06 0B
                                21 CA OE FD
                                              7E 01 FE 04
ODRO 38 OC FE 06
                  30 05 21 D5
                                0E 18 03 21
                                              EO OE 7E DD
ODCO 77 43 DD 23
                  23 10 F7 FB
                                7E FF FE 03
                                              28 03 B7 20
ODDO DE CD F5 OC
                  FE 1F 20 F9
                                FB 7E 01 FE
                                              0E 28 F2 CD
ODEO EE OC CB OC
                  OB FB CB FF
                                4E 02 07 0E
                                              DD 36 F9
                                                       3F
ODFO CD 9A OC D9
                  01 01 10 B9
                                B9 OB CB 78
                                              D9 28 OF 21
0E00 OB OF 11 OC
                                B8 OE CD 8A
                  00 DB 19 C3
                                              00 06 04 34
OE10 CB 5E 28 05
                  36 00 2B 10
                                F6 21 75 0F
                                              22 73 OF 7B
0E20 FD BE 00 28
                  22 11 60 OF
                                01 06 00 ED
                                             80 CD 50 0C
0E30 EB BE 20 64
                  CD 65 00 EB
                                23 BE 20 BC
                                              CD 8A 0E 2A
OE40 73 OF OE 06
                  09 18 B5 EB
                                21 69 OF E5
                                              01 04 00 ED
0£50 B0 E1 06 04
                  7E C6 30 DD
                                77 F9 23 DD
                                              23 DB 23 10
0E60 F3 0E 02 41
                  CD DD OC B7
                                28 02 2E 35
                                              DD 36 FB 5F
OE70 CD FE OC FE
                  10 28 ED DD
                                77 FB B6 30
                                              67 DD 23 DD
OE80 23 05 78 B7
                  28 05 7D 94
                                6F 18 E1 CD
                                              F5 00 FE 10
0E90 28 B2 FE 1F
                  20 F5 FB 7E
                                             77 00 70 13
                                00 C6 06 FD
OEAO 12 DD 7E F7
                  D6 30 1B 12
                                FE 04 20 1B
                                              21 EB OE FD
OEBO CR FF 46 28
                  03 21 FR 0E
                                FD CB FF CE
                                              06 10 2E BD
OECO 77 28 DD 23
                  23 10 F7 C3
                                                 5A 49 4E
                                45 00 41 40
                                             41
OEDO 47 20 21 20
                  20 06 20 56
                                45 52 59 20
                                              47 4F 4F 44
OEE0 59 45 53 2C
                  41 54 20 4C
                                41 53 54 59
                                              4F 55 20 4D
OEFO 41 59 20 43
                  4F 4E 54 49
                                4E 55 45 22
                                              52 22 20 46
OF00 4F 52 20 52
                  45 20 53 54
                                41 52 54 4D
                                              41 52 48 49
OF10 4E 47 20 45
                  52 52 4F 52
                                20 5E 20 1E
                                              20 20 20 20
OF20 20 20 59 4F
                  55 52 53 20
                                20 20 20 20
                                              20 20 20 20
OF30 4C 49 4E 45
                  20 20 20 20
                                             4D 49 4E 45
                                20 20 20 20
OF40 1F 1F 1F 1F
                  1F 1F 1F 1F
                                1F 1F 1F 1F
                                              1F 1F 04 40
OF50 41 53 54 45
                  52 40 49 4E
                               44 20 49 49
```

TINY BASIC PAGE

FIRSTLY, HAVE YOU NOTICED THAT SETTING UP THE ARRAY TO A CERTAIN VALUE ALWAYS SEEMS TO TAKE A LONG TIME. WELL IF YOU HAVE THE 3K TINY BASIC, YOU CAN MAKE USE OF THE MCU COMMAND TO SET THE ARRAY BY A MACHINE CODE UP COPY. THIS SHORT SUBROUTINE (COURTESY OF HOWARD) MAKES FULL USE OF THIS FACILITY, AND EVEN ALLOWS SETTING PARTS OF THE ARRAY.

```
B-BASIC Vi.i
\square K
>LIST
                       FAST ARRAY SETUP SUBROUTINE
  10 REM
  20 REM
                               *********
  30 REM
           SETS THE FROM Q(N) TO Q(L) TO THE VALUE K
  40 REM
           ENTER WITH K. L AND M SET
  50 REM
           ALSO USES VARIABLES J AND M
           RETURNS WITH J=1 IF A COMBINATION OF L AND M ARE ILLEGAL,
  60 REM
      DIHERWISE J=0
  70 IF (N<0)+(L<=N)+(L>S./2) L. J=1; RET
  80 L. J=K, M=4096
  90 MCK
 100 L. M=K-2+(2♦M), L=2♦(L-M), K=J, J=0
 110 MOW
 120 L. N=M, M=M-2
 130 MCU
 140 RET
\square K
```

ALSO WHEN USING THE MACHINE CODE FACILITIES OF THE 3K Tiny Basic, some NEAT TRICKS WITH THE MCI AND MCP COMMANDS ARE POSSIBLE. ONE IS TO FIND THE LENGTH OF L AFTER AN MCI INPUT.

```
B-BASIC V1.1
ПK
PLIST
  10 REM
           TO FIND L WHEN USING AN MCI COMMAND
  20 REM
  30 REM
           SET L AND M AS IN THE MANUAL AND INPUT THE STRING
  40 L. L=20, M=16000; MCI
  50 REM
           NOW FIND THE REAL LENGTH OF L
  60 M=M+L-1
  70 MCL; IF M=32 L. L=L-1, M=M-2; G.70
  80 REM
         L IS NOW EQUAL TO THE LENGTH OF THE STRING
\square \mathbb{K}
```

FURTHER, WHEN USING MULTIPLE STRINGS, THE ARRAY MAY BE USED TO KEEP TRACK OF THE ADDRESSES AND LENGTHS OF THE STRINGS.

```
B-BASIC V1.1
\square K
>LIST
           USING THE ARRAY TO HOLD STRING LENGTHS AND ADDRESSES
  90 REM
 100 REM
           THE FIRST LOCATION CONTAINS THE NUMBER OF STRINGS
 110 REM
           AND IS INCREMENTED AFTER EACH MCI INPUT
 120 REM
 130 L. @(0)=@(0)+1
           THEM THE VALUE OF M, AND THE NEW L
 140 REM
 150 L. @(1)=16000, @(2)=L
 160 REM
            Nobbs/ contain the start of the STRING, AND NEVENS/ THE LENGTH
BK.
>
```

The following little program demonstrates what can be done with the strings and the array.

```
10 P. 31
  20 P. "Good bay, I'm a Nascom, what is your name ?"
  30 L. M=16000, L=20, \Im(0)=0, \Im(1)=M
  40 MCI; M=M+L-1
  50 GOS. 500
  60 REM NOW PRINT STRING 1. USING K AS THE STRING NUMBER
  70 P. "WELL "+; K=1; GOS.610; MCP; P." IT'S NICE TO KNOW YOU."; P.
  80 P."Tell ME (IN A COUPLE OF WORDS) WHAT THE WEATHER IS LIKE. ",
  90 REM
         NOW CALCULATE THE NEXT M
 100 GDS. 710; L=20; MCI; M=M+L-1
 110 SDS. 500
 120 P.; P. "I see. As this is a Demo program, \Gamma'm going to Let you enter
     ANY OLD RUBBISH YOU LIKE NOW.
 130 GOS. 710; L=47; MCI; M=M+L-1
-140 5⊡3. 500
 150 P.; P.; P.; P. "FINE, I hope you feel better, now just to prove I
      CAN DO IT: I've PRINTED THE STRINGS."; P.
 160~\mathrm{P}_{\star} "The RUBBISH YOU TYPED WAS"
 170 K=3; G⊡S. 610; MCP; P.; P.
 180 P. "Тне меятнея is ",; K=2; GOS. 610; МСР; Р. "."; Р.
 190 P. "Bye ",; K=1; GBS. 610; MCP; P.", HAME A NICE DAY."; P.
200 S.
500 REM
          - SUBROUTINE TO FIND REAL L
510 MCL; IF K=32 L=L-1, M=M-2; 6.500
520 L. ᢒ(0)=ᢒ(0)+1, ᢒ(2◆ᢒ(0))=L
530 RET
          SUBROUTINE TO FIND L AND M. USING K AS A MESSAGE NUMBER.
600 REM
610 L. M=0(2•K-1), L=0(2•K); RET
700 REM CALCULATE NEW M
710 L. M=0(2+0(0)-1)+0(2+0(0)), 0(2+0(0)+1)=M; RET
\square K
```

Situations Vacant

Nascom Microcomputers are looking for an Electronics Technician to work at their Berkhamsted office. The position will include building prototypes, answering technical queries and assisting in the Repair Department. All enquiries should be made to:

Mr W J Bulman at Mascom Microcomputers Limited. 92 Broad Street, Chesham, Bucks.

Note from the INMC Committee

Well, that's the end of this newsletter. We hope you like it. In the mext issue we hope to have details of the programs in the Software Library, further Software and Hardware hints, and the solution to the little puzzle in this issue. We also look forward to receiving letters, criticism and information from you to include in YOUR newsletter.

Logically Yours,

THE INMC COMMITTEE